

Multi- function Junction Box Fitting


MEASUREMENTS

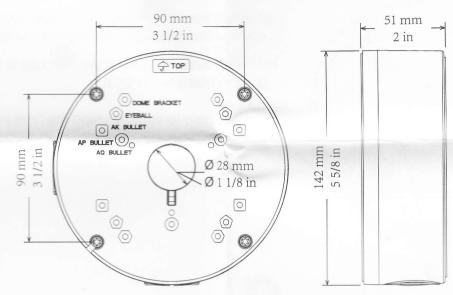

PRODUCT BREAKDOWN

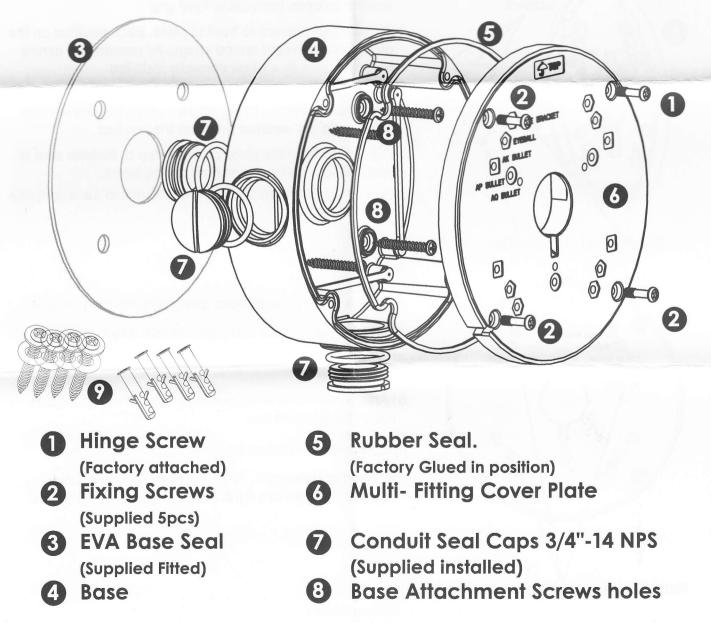

INSTALLATION GUIDE

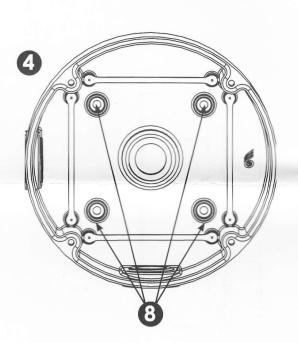




a)Loosen screw U to allow hinged movement of the cover plate, remove plate and keep screw safe.


b) If using side conduit ensure **V** cap is fitted to rear of base to make water tight.

c) Attach base to surface using the hole positions as shown

as (3, use the four (2) screws and plugs supplied. Be sure the rubber washer is attached to assure waterproof attachment.

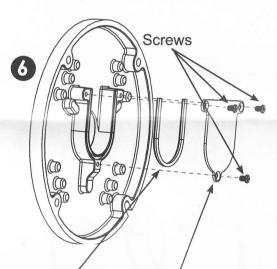

Rubber seal Cable Plate

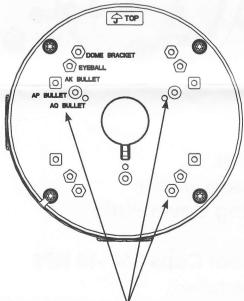



a)Reverse side of cover plate O remove the three screws, to open front cable feed gap.

- b)Now attach camera to front of plate. Each position on the plate has a different shape image. All cameras fit centre of the junction box when correctly installed.
- Note: The top of plate position is always to face north, do not try use incorrect fitting screws which break the plate as will void the weather proof on the product.
- c) Now reconnect the plate as from step b. Rubber seal is installed into place and should not be loose.

Now you should have an attached camera to the front plate



a) Attach cover plate to base using only the hinge screw

. So can have a swinging camera attached to the junction box, to enable hands to connect cables.

b) Attach cables for analogue or IP products and locate inside the junction box.

c) Complete installation be sure rubber seal **5** is not

pinched or damaged. Attach screws **2**. Into three location, be sure are tight. Note: 2 spares are provided

Note: Shapes match each model type